

Iwatsu ADIX Telephone System

Changing the time on an Iwatsu ADIX system can be done from the operator DSS console or from the attendant console.

From the Operator DSS when idle:

1. Press "ICM" + "FEAT" + "6" + "4"
2. Enter the time "HH MM" using the 24 hour military clock
3. Press "SPKR"

From the Attendant Console when idle:

1. Press "ETC" + "ETC" + "ETC" + "F1"
2. Enter the time "HH MM" using the 24 hour military clock
3. Press "RLS"