

Merlin Magix system

The time and date is a system feature rather than an individual telephone feature.

To change the date in the Magix system, from the System Programming console:

1. Press Menu.
2. Press System Program.
3. Press Exit or Start.
4. Press System.
5. Press Date.
6. Enter date in following format: mmddyy (where MM is the month, DD is the day, and YY is the year).
7. Press Enter.
8. Press Exit or Back.
9. Press Home or Exit to exit programming mode.

To change the time in the Magix system, from the System Programming console:

1. Press Menu.
2. Press System Program.
3. Press Exit or Start.
4. Press System.
5. Press Time.
6. Enter the time in military/24 hour format: HH:MM (where HH is the hour, 01-24, and MM is minutes, 00-60).
7. Press Enter.
8. Press Exit or Back.
9. Press Home or Exit to exit programming mode.