

Adjusting All the Samsung DCS & iDCS Systems For Daylight Savings Time

Changing date & time on the Samsung DCS & iDCS systems

With Handset Down

Action

1. Press TRSF Button
2. Enter 200
3. Enter 1234 (Or Your Passcode If Different)
4. Press VOL UP Button
5. Press TRSF Button
6. Press TRSF Button
7. Enter 505
8. Enter Day, Date, & Time (See Below)

W= Day Of Week (1= Monday, 2= Tuesday, etc.)
 MM= Month DD= Day YY= Year
 HH= Hour MM= Minute (Enter in military format)

9. Press TRSF Button

Display Will Show

Programming Mode
 Enter PGM ID:
 Enable Cus. Prog.
 Passcode:
 Enable Cus. Prog.
 Disable
 Enable Cus. Prog.
 Enable
 Normal Idle Display
 Programming Mode
 Enter PGM ID:
 Old: 2 1 0 2 8 9 7: 1 2 0 2
 New:WMMDDYY:HHMM
 Old: 2 1 0 2 8 9 7: 1 1 0 2
 New:WMMDDYY:HHMM

Normal Idle Display

Adjusting the Samsung 12/24 and 56/120 For Daylight Savings Time

Changing date & time on the Samsung 12/24 and 56/120

Action

With Handset Down

1. Press #20
2. Enter 1234 (Or Your Passcode If Different)
3. Press MUTE Button
4. Press #
5. Enter #70
6. Enter Date, Day, & Time (See Below)

YY= Year MM= Month DD= Day
 W= Day Of Week (1= Monday, 2= Tuesday, etc.)
 HH= Hour MM= Minute (Enter in military format)

7. Press #

Display Will Show

OPEN SYSTEM PMG
 ENTER CODE
 OPEN SYSTEM PMG
 CLOSED:
 OPEN SYTEM PMG
 OPENED:
 NORMAL IDLE DISPLAY
 YY MM DD W HH MM
 98 10 26 1 10 33
 YY MM DD W HH MM
 98 10 26 1 10 33

NORMAL IDLE DISPLAY

Adjusting the Samsung StarMail For Daylight Savings Time Changing date & time on the Samsung StarMail

Action	System Will Respond
1. Press the voice mail button (on any telephone) or Dial 510.	Enter password
2. Enter **456# or *(Your password)#.	Enter Function.
3. Enter 320#	The current time is (current time) Enter the time in 12 hour format or press # to confirm.
4. Enter the time in 12 hour (AM / PM) format and press #.	For AM press 1. For PM press 2.
5. Enter 1 or 2 and press #.	Current Time. Confirm.
6. Enter #.	Enter Function.
7. Enter 110#	The system will return to the main greeting.

Adjusting the Samsung 816 For Daylight Savings Time Changing date & time on the Samsung 816

With Handset Down

Action	Display Will Show
1. Press #	"Programming"
2. Enter 04	"Disabled"
3. Enter 43211	"Disabled 1"
4. Press #	"Normal Date & Time"
5. Press #	"Programming"
6. Enter 55	"YYMMDDWHHMM"
7. Enter Date, Day & Time (See Below)	"98010111157"
YY= Year MM= Month DD= Day W= Day Of Week (1= Monday, 2= Tuesday, etc.) HH= Hour MM= Minute (Enter in military format)	
8. Press #	"Normal Date & Time"

Adjusting the Samsung 816 Plus For Daylight Savings Time Changing date & time on the Samsung 816 Plus

With Handset Down

Action	Display Will Show
1. Press #	"Programming"
2. Enter 06	"Disabled"
3. Enter 43211	"Disabled 1"
4. Press #	"Normal Date & Time"
5. Press #	"Programming"

6. Enter 55

"YYMMDDWHHMM"

7. Enter Date, Day & Time (See Below)

"98010111157"

YY= Year MM= Month DD= Day

W= Day Of Week (1= Monday, 2= Tuesday, etc.)

HH= Hour MM= Minute (Enter in military format)

8. Press #

"Normal Date & Time"